




CAST Manual Timer Instructions (CTTC)

Thank you for your purchase of the CAST Lighting Manual Timer (CTTC).

1. Unplug transformer power cord from 120-volt power receptacle before plugging and unplugging timer.
2. Unplug bypass cord from timer receptacle located inside transformer enclosure.
3. Plug timer into timer receptacle.
4. Plug bypass cord into receptacle on the side of the timer.
5. Hours of day and night are printed on timer dial. Turn dial until arrow on center disk points to current time of day.
6. Grey pins located around center dial control on/off cycles. Pins have two positions: In (towards center) and Out (towards outer edge). When pin is in "In" position, the lights are off. When pins are in "Out" position, lights are on.
7. Push pins outward to set "On" time. For example, if all pins between 5 pm and 1 am are pushed outward, then the lights will be on between those two times.
8. The switch on right side of timer has two positions:
 - **Timer:** Allows timer to cycle through on/off settings - normal operation.
 - **On:** Turns all lights on regardless of settings - for testing.



 **CAUTION:** Unplug transformer from 120V outlet before plugging or unplugging timer to prevent damage to timer or tripping of circuit breaker