


TORK®

PROGRAMMING & INSTALLATION INSTRUCTIONS

460D

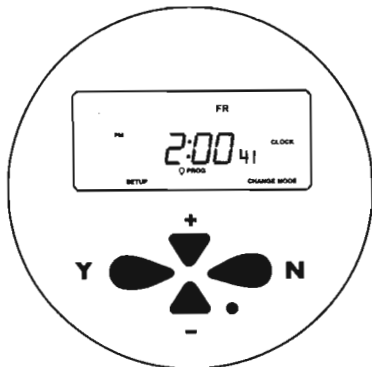

RATINGS

- 120VAC, 15A, 1800W
General Purpose and Resistive
- 120VAC, 1000W Tungsten
- 120VAC, 1/3 HP, TV-5

CARACTÉRISTIQUES

- 120 V c.a., 15 A, 1800 W
usage général et résistif
- 120 V c.a., 1000 W tungstène
- 120 V c.a., 1/3 H.P., TV-5

CLASIFICACIONES

- 120 VAC 15 A, 1800 Vatios
Para uso general y resistivo
- 120 VCA 1000 VATIOS tungsteno
- 120 VCA 1/3 HP, TV-5

ONE YEAR LIMITED WARRANTY: If this product fails because of a manufacturing defect within one year after purchase, we will, at our option, either repair or replace it at no charge. Our warranty does not cover damage caused by accident, abuse or misuse. We assume no further liability with respect to the sale or use of this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY. We make no warranty with respect to the fitness of any goods for the users particular application. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state.

It is our intent to provide accurate and current specification information. However, in the interest of product improvement, TORK may alter the specifications or constructional details without prior notice.

PLEASE READ ALL INSTRUCTIONS FIRST INSTALLATION INSTRUCTIONS

Charging the battery overnight will allow removal from outlet during programming. Plug timer into outlet to begin programming.

PROGRAMMING

The bottom of the screen provides self-prompting information on the multiple use buttons in each programming mode. The left button **Y** is used to start set-up and affirm settings. The right button **N** is used to change mode and or exit mode. The center buttons **+** and **-** are used to scroll choices.

SET TIME

Press **Y** and set-up menu appears on right with **PROG** flashing. Press **+** until **CLOCK** is flashing. Press **Y** to affirm mode choice. Use scroll buttons **+** and **-** to adjust **HOUR**, press **Y** to affirm. Use same method to adjust **MINUTE** and day of **WEEK**. Pressing **Y** to affirm day of week returns timer to clock mode.

TO ADJUST DAYLIGHT SAVINGS TIME (DST)

Press **Y** and set-up menu appears on right with **PROG** flashing. Press **+** until **SUMMER** is flashing on the display. Press **Y** to affirm mode choice. Use scroll buttons **+** and **-** to display **SUMMER**, one hour will be added to the time. Press **Y** to affirm. Use the same method at the end of DST to remove **SUMMER** and return to standard time.

SET PROGRAM

Press **Y** and **PROG** will flash. Press **Y** to affirm mode choice. Press **Y** to select **O1ON** for the first time entry. Use scroll buttons **+** and **-** to adjust **HOUR**, press **Y** to affirm. Use same method to adjust **MINUTE** and day of **WEEK**. Use scroll buttons **+** and **-** to display **O1OFF**. Repeat method for **HOUR**, **MINUTE**, and day of **WEEK**. Up to 24 **ON/OFF** pairs may be entered by this method. Press **N** to exit.

SET RANDOM

Press **Y** and set-up menu appears on right with **PROG** flashing. Press **+** until **RANDOM** is flashing on the display. Press **Y** to affirm mode choice. Use scroll buttons **+** and **-** to display **RANDOM**. Press **Y** to affirm. Use the same method to remove **RANDOM**.

SET COUNTDOWN

Press **Y** and set-up menu appears on right with **PROG** flashing. Press **+** until **DOWN** is flashing. Press **Y** to affirm mode choice. Use scroll buttons **+** and **-** to adjust countdown **HOURS**, press **Y** to affirm. Use same method to adjust **MINUTES**. Press **N** to begin countdown. After countdown is complete press **N** to return to clock mode.

MANUAL OVERRIDE

Press **N** to change these options:

1. ALWAYS ON = Load ON and ignores programs.
2. PROG = Load ON until next program OFF.
3. ALWAYS OFF = Load OFF and ignores programs.
4. PROG = Load OFF until next program ON.